

SW24 Remote Receiver

SPECIFICATION and INSTRUCTION SHEET

DESCRIPTION: One Ceiling Fan & Light, 3 Speed Remote Control

ELECTRICAL SPECS: 120 Volts, 60 Hertz, Fan 3.0 amp, Light Rating 360W Incandescent or Halogen

FAN MODELS USED: Must use with TR24 Hand-Held Remote or the C25 Wall Control or Both
See Catalog or visit our website www.fanimation.com for more information

Be sure the electricity to the fan is turned off!

1. Removing the Housing Support Cover:

Remove the original housing support cover from the fan by unscrewing the four screws and unplugging the wire harness connector (Figures 1).

2. Setting the Receiver Code:



The remote unit has 16 different code combinations. It may be necessary to test a couple frequency code settings to improve signal reception and/or eliminate interference from other remote control household items. Multiple fans should have different code settings to allow independent fan control. To set the code, slide code switches to the same positions as is set on your TR24 or C25 transmitter(s) (Switch Detail - Figure 2).

3. Installing the Remote Receiver Unit:

Connect the plug from the receiver unit into the socket located in the fan assembly. Connect terminal from antenna wire to terminal inside center housing support. Slide housing control cover over the remote receiver unit (Figure 2).

4. Installing the Housing Control Cover:

Slide the assembled housing cover over the housing support base by installing and tightening the four screws (Figure 2).

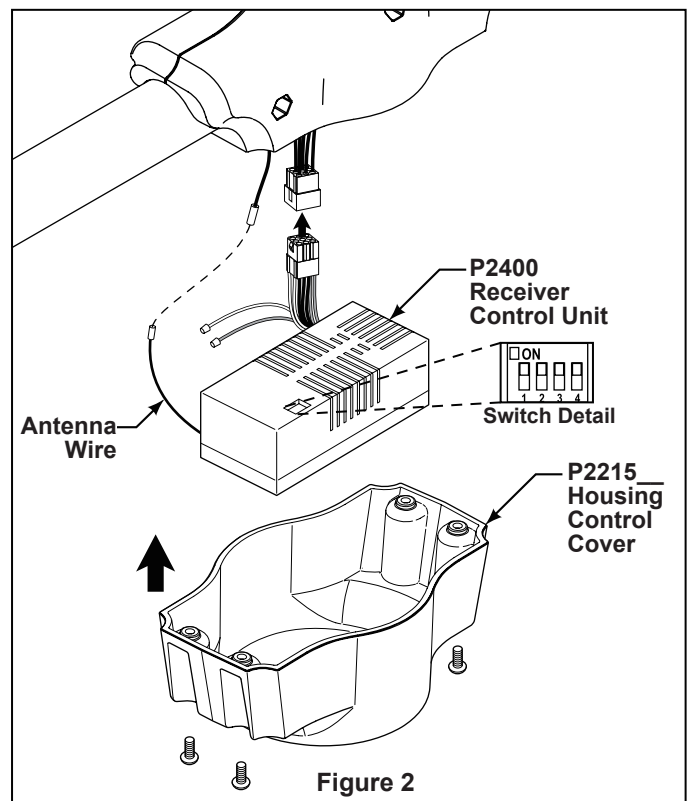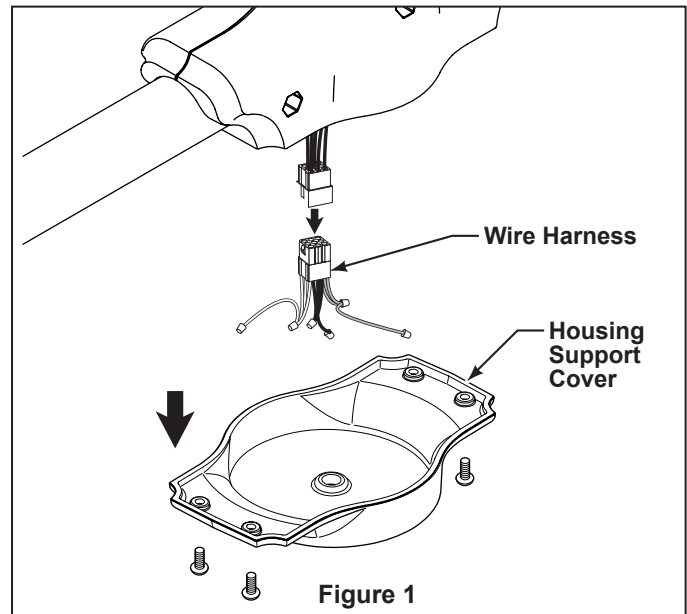

⚠ WARNING

Check to see that all connections are tight. To avoid possible electrical shock, make sure that the electrical wires are completely inside the switch housing and not pinched between the switch cap base and switch housing.

NOTE: The illustrations shown is not to scale or its actual configuration(s) may vary.



10983 Bennett Parkway
Zionsville, IN 46077
(888) 567-2055 • FAX (866) 482-5215
Visit Our Website @ www.fanimation.com