

FW423** Installation Instructions

NOTES: These instructions can also apply to other fan models with standard switch cap.

WARNING

To avoid possible electric shock, be sure electricity is turned OFF at the main fuse box before removing, installing, or servicing the light fixture.



1. Remove threaded plug from cover switch housing.



2. Remove cover switch housing.



3. Place large rubber washer (provided) between fitter and cover switch housing before attaching cover switch housing to fitter with lockwasher and nut provided.



4. Locate white and blue wires labeled "FOR LIGHT".



5. Connect white-to-white and blue-to-black wires with wire nuts.



6. Assemble cover switch housing/fitter assembly with original screws.



7. If the glass bowl height is not ideal for the preset nipple length, loosen the nipple-nut, adjust accordingly and re-tighten the nut.



8. Install 3 candelabra bulbs (not included - 60 watts max) in each of the sockets.



9. Assemble glass bowl (not included) with bowl cap and finial nut provided, do not over-tighten.

WARNING

To avoid possible fire or shock, make sure that the electrical wires are completely inside the fan housing and not pinched between the switch cup housing and the switch cover housing.

FANIMATION

Copyright 2005 Fanimation

10983 Bennett Parkway
Zionsville, IN 46077
(888) 567-2055 • FAX (866) 482-5215
Outside U.S. call (317) 733-4113
Visit Our Website www.fanimation.com

2005/10