


The Tropicana®

Ceiling Fan

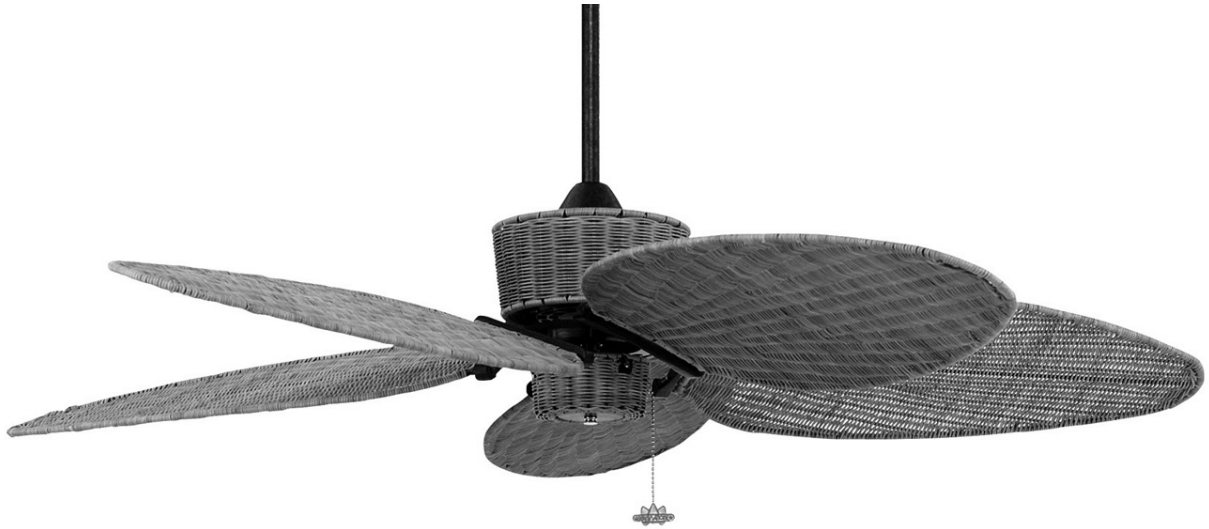

FP1620NO = Natural Wicker with Rust Trim &
Narrow Oval Blades

Net Weight 22 lbs.

MODEL No. FP1620

OWNER'S MANUAL
READ AND SAVE THESE INSTRUCTIONS



Suitable For Use In Damp Locations

Important Safety Instructions

WARNING: To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your owner's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning unit, switch power off at service panel and lock service panel disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be careful of the fan and blades when cleaning, painting, or working near the fan. Always turn off the power to the ceiling fan before servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. Do not operate reversing switch until fan blades have come to a complete stop.

Additional Safety Instructions

1. To avoid possible shock, be sure electricity is turned off at the fuse box before wiring, and do not operate fan without blades.
2. All wiring and installation procedures must satisfy National Electrical Codes (ANSI/ NFPA 70-1999). Use the National Electrical Code if Local Codes do not exist. The ceiling fan must be grounded as a precaution against possible electrical shock. Electrical installation should be made or approved by a licensed electrician.
3. The fan base must be securely mounted and capable of reliably supporting at least 100 lbs. (fan and accessories not to exceed 35 lbs. or 16 kgs.). Outlet boxes are not acceptable for fan support. See page 5 of owner's manual for support requirements. Consult a qualified electrician if in doubt.
4. **CAUTION:** To reduce the risk of personal injury, mount the fan base to a ceiling joist or structural member using the hardware provided with your fan.

WARNING: Support Directly from Building Structure.

5. The fan must be mounted with the fan blades at least 7 feet from the floor to prevent accidental contact with the fan blades.
6. Follow the recommended instructions for the proper method of wiring your ceiling fan. If you do not have adequate electrical knowledge or experience, have your fan installed by licensed electrician.
7. Suitable for use with solid-state speed controls.

WARNING: To reduce the risk of fire or electric shock, this fan should only be used with Fan Speed Control Part No. UC7051R, manufactured by Rhine Electronic Co., Ltd.

WARNING: TO REDUCE THE RISK OF SHOCK, THIS FAN MUST BE INSTALLED WITH AN ISOLATING WALL CONTROL/SWITCH.

WARNING: This product is designed to use only those parts supplied with this product and/or accessories designated specifically for use with this product. Using parts and/or accessories not designated for use with this product could result in personal injury or property damage.

WARNING: To reduce the risk of personal injury, do not bend the blade bracket (flange or blade holder) when installing the brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.

LIMITED LIFETIME WARRANTY

Extends to the original purchaser of a Fanimation Fan

1. **LIMITED LIFETIME MOTOR WARRANTY** - If any part of your fan motor fails, due to a defect in materials or workmanship during the lifetime of the original purchaser, Fanimation will provide the replacement part free of charge, when the defective fan is returned to our national service center. Proof of purchase is required. Customer shall be responsible for all costs incurred in the removal or reinstallation and shipping of the product for repairs or replacement.
2. **ONE YEAR MOTOR LABOR WARRANTY** - If your fan motor fails at any time within one year from the original purchase, due to defects in materials or workmanship, labor to repair the motor will be provided free of charge at our national service center. Purchaser will be responsible for labor charges after this one-year period. Customer shall be responsible for all costs incurred in the removal or reinstallation and shipping of the product for repairs or replacement.
3. If any other part of your fan fails at any time within one year after original purchase, due to a defect in materials or workmanship, we will repair, or replace, at our option, the defective part free of charge for parts and labor performed at our national service center.
4. Because of varying climate conditions, this warranty does not cover changes in the finish, including rusting, pitting, corroding, tarnishing, or peeling.
5. This warranty is void and does not apply to damage from improper installation, neglect, accident, misuse, exposure to extremes of heat or humidity, or as a result of any modification to the original product.
6. All costs of removal and reinstallation of the fan are the sole responsibility of the owner of the fan and not the store that sold the fan or Fanimation.
7. Fanimation reserves the right to modify or discontinue any product at any time and may substitute any part under this warranty.
8. Under no circumstances may a fan be returned without prior authorization from Fanimation. The receipt of purchase must accompany authorized returns and must be sent freight prepaid to Fanimation. The fan to be returned must be properly packed to avoid damage in transit; Fanimation will not be responsible for any damage resulting from improper packaging.
9. It is understood that any repair or replacement is the exclusive remedy available from Fanimation. There is no other expressed or implied warranty. Fanimation hereby disclaims any and all implied warranties, including, but not limited to those of merchantability and fitness for a particular purpose to the extent permitted by law. Some states do not allow limitations on implied warranties. Fanimation will not be liable for incidental, consequential, or special damages arising out of or in conjunction with product use or performance, except as may otherwise be accorded by law. This warranty gives you special legal rights and you may also have other rights that vary from state to state.
10. A certain amount of wobble is normal and should not be considered a problem or a defect.

Table of Contents

Unpacking Instructions	3
How to Put Your Ceiling Fan Together	4
How to Hang Your Ceiling Fan	5
Electrical Requirements	6
Wiring and Control Options	6
How to Wire (& Operate) Your Ceiling Fan - Pull Chain	7
How to Wire (& Operate) Your Ceiling Fan - C4 Wall Control (Optional)	8
How to Wire (& Operate) Your Ceiling Fan - C1 Wall Control (Optional)	9
Mounting the Fan Blades, Maintenance & Blade Cleaning	10
Trouble Shooting	11
Parts List	12
Exploded-View Drawing	13

This Manual is Designed to Make it as Easy as Possible for You to Assemble, Install, Operate, and Maintain Your Ceiling Fan

Tools Needed for Assembly

- One Phillips head screwdriver
- One stepladder
- One 1/4" blade screwdriver
- Three wire connectors (supplied)
- One wire stripper

WARNING

Before assembling your ceiling fan, refer to section on proper method of wiring your fan (page 6). If you feel you do not have enough wiring knowledge or experience, have your fan installed by a licensed electrician.

Materials

Wiring outlet box and box connectors must be of type required by local code. The minimum wire would be a 3-conductor (2-wire with ground) of the following size:

<u>Installed Wire Length</u>	<u>Wire Size A.W.G.</u>
Up to 50 ft.	14
50-100 ft.	12

NOTE: Place the parts from the loose parts bag in a small container to keep them from being lost. If any parts are missing, contact your local retailer.

DAMP LOCATION CEILING FAN: For a Damp Location Ceiling Fan, you may only use light kits marked suitable for use in damp locations.

Unpacking Instructions

For your convenience, check-off each step. As each step is completed, place a check mark. This will ensure that all steps have been completed and will be helpful in finding your place should you be interrupted.

WARNING

Do not install or use fan if any part is damaged or missing. Contact your retail store for missing or damaged parts.


WARNING

This product is designed to use only those parts supplied with this product and/or any accessories designated specifically for use with this product by Fanimation. Substitution of parts or accessories not designated for use with this product by Fanimation could result in personal injury or property damage.

NOTE: If you are uncertain of part description, refer to exploded view illustration. (Figure 18, Page 13)


- Fan Motor assembly
- Downrod/Hanger Ball assembly
- Ceiling Canopy & Hanger Bracket
 - Canopy screws attached to hanger bracket
- Hardware bag:
 - Ten 10-32 x 1/2" flywheel screws
 - Two 8-32 x 1-1/2" machine screws
 - Two flat washers
 - Two lock washers
 - Three wire connectors
 - Two rubber pads
 - Fanimation chain pull
- Motor Coupling Cover
- Set of blades (5), (Standard Oar or Narrow Oval)

1. Check to see that you have received the following parts:

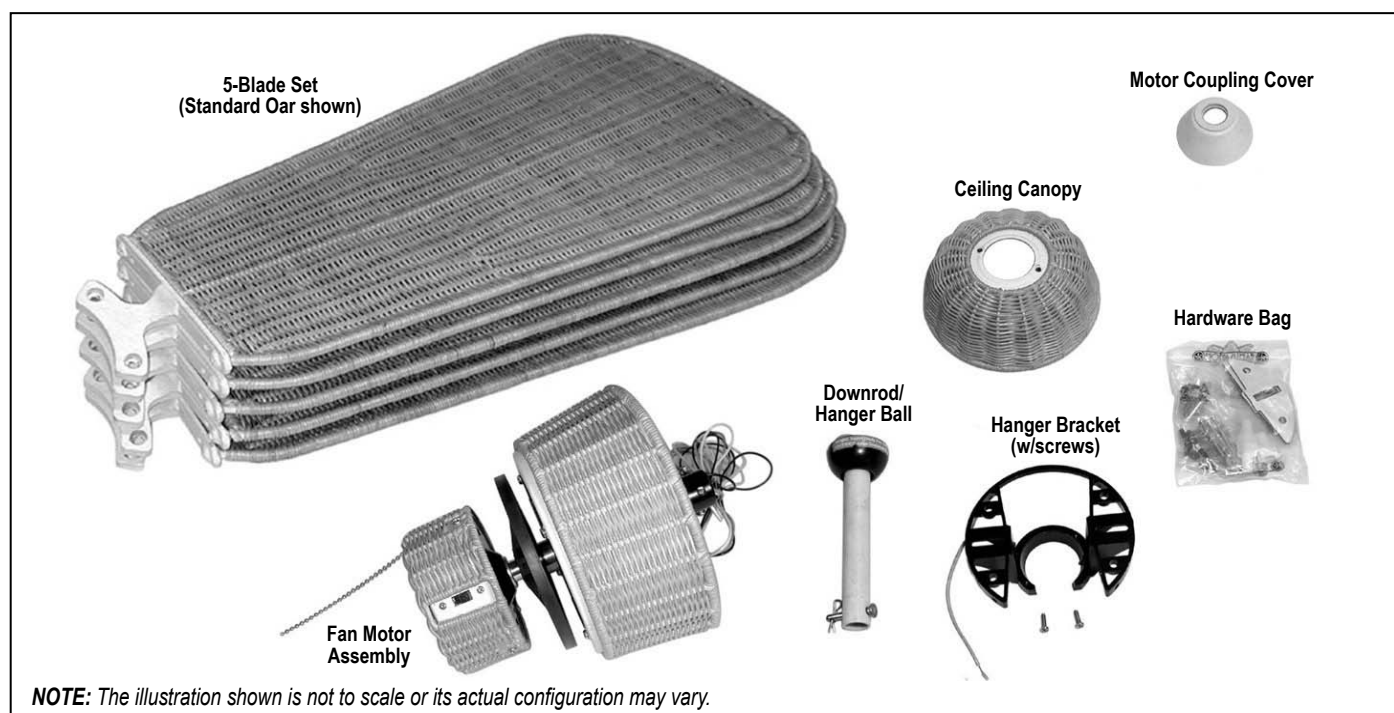

How to Put Your Ceiling Fan Together


1. Prior to assembly, set aside and save the hardware bag packed in the foam packing.
2. Place ceiling canopy wicker cover over the metal ceiling canopy and secure with metal tabs (Figure 1).

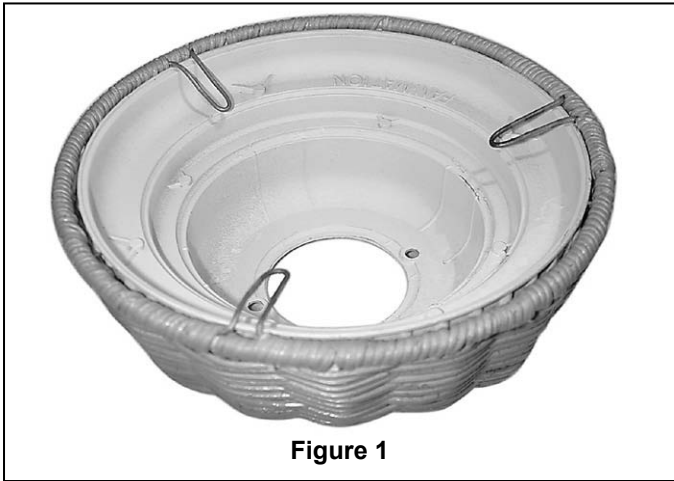

3. Pass the Downrod/Hanger Ball Assembly through the top of the ceiling canopy (Figure 2) and push the bell-shaped motor coupling cover on to the downrod as shown.

NOTE: You will be using either the 6" downrod supplied with your fan or an optional downrod purchased separately.

4. Separate and untwist the three motor leads. Route the motor leads through the Downrod/Hanger Ball Assembly.

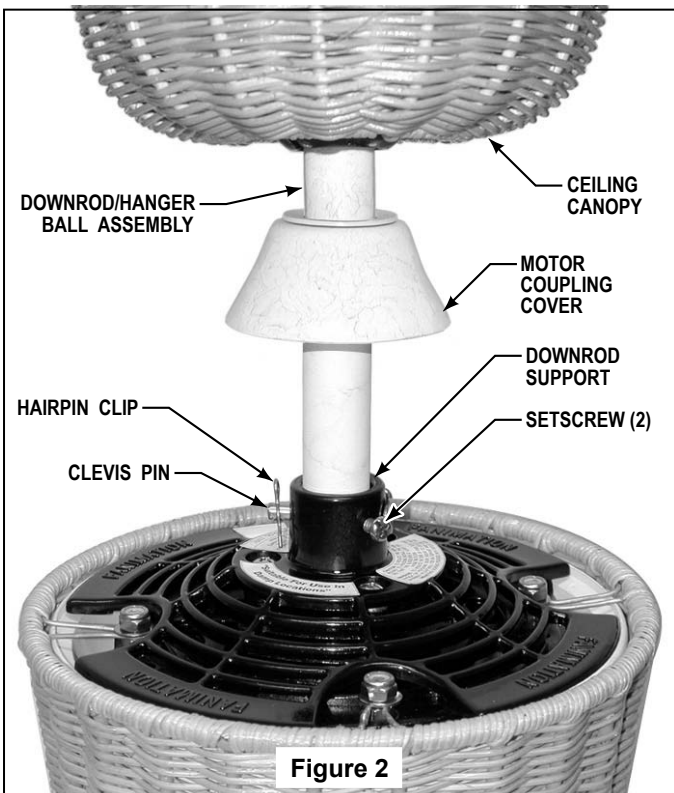


⚠ WARNING

It is critical that the clevis pin in the downrod support is properly installed and the setscrews are securely tightened. Failure to verify that the pin and setscrews are properly installed could result in the fan falling.

5. Loosen the two setscrews in the downrod support. Align the clevis pin holes in the downrod with the holes in the downrod support. Install the clevis pin and secure with the hairpin clip (Figure 2). The clevis pin must go through the holes in the downrod support and the holes in the downrod. Be sure to push the straight leg of the hairpin clip through the hole near the end of the clevis pin until the curved portion of the hairpin clip snaps around the clevis pin. The hairpin clip must be properly installed to prevent the clevis pin from working loose. Pull on the hanger ball to make sure the clevis pin is properly installed.
6. While pulling up on the hanger ball, securely tighten the two 3/16-24 x 3/8" setscrews in the downrod support (Figure 2).

NOTE: The setscrews must be properly installed as described above, or fan-wobble could result.

7. Slide the Motor Coupling Cover down until it touches the top of the motor (Figure 3).

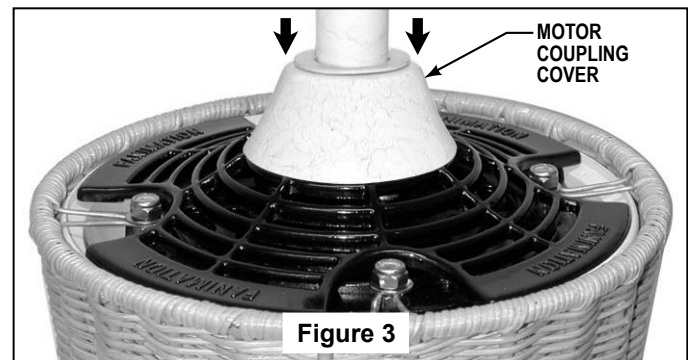


8. The fan comes with blue, black, and white leads. Before installing fan, measure up approximately 6-9 inches above top of Downrod/Hanger Ball Assembly. Cut off excess wire and strip back insulation 1/2" from end of wire.
9. You have now completed the assembly of your new ceiling fan. You can now proceed with the hanging and the electrical wiring of your fan.

⚠ WARNING

To reduce the risk of personal injury, do not bend the blade holders when installing, balancing the blades or cleaning the fan. Do not insert foreign objects in between the rotating blades.

How to Hang Your Ceiling Fan

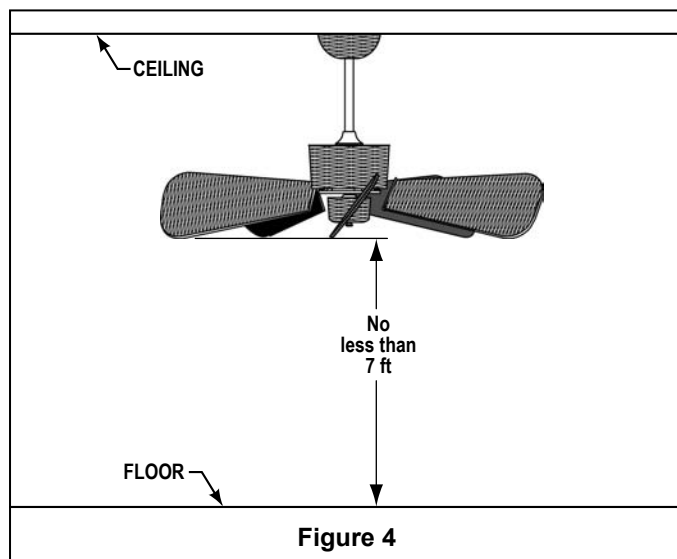

⚠ WARNING

The fan must be hung with at least 7' of clearance from floor to blades (Figure 4)

⚠ WARNING


The outlet box must be securely anchored and capable of withstanding a load of at least 50 lbs.

⚠ WARNING

Do not connect fan blades until the fan is completely installed. Hanging fan with blades connected may result in damage to the fan blades.

⚠ WARNING


Hanger bracket must seat firmly against outlet box. If the outlet box is recessed, remove wallboard until bracket contacts box. If bracket and/or outlet box are not securely attached, the fan could wobble or fall.

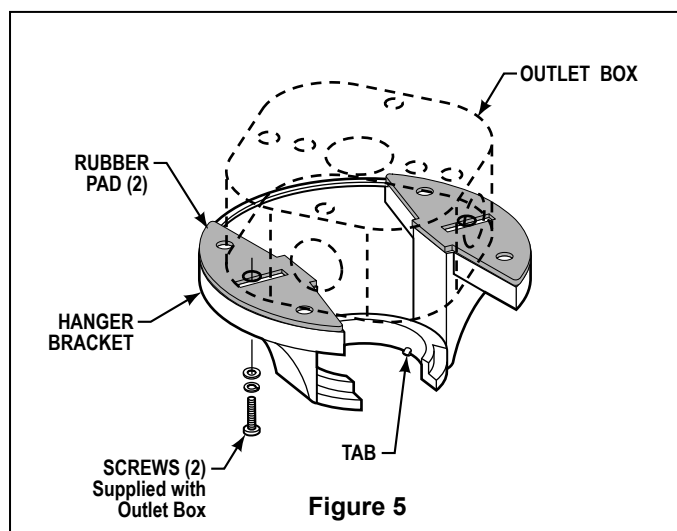

1. Place the rubber pads on the ceiling side of the Hanger Bracket (Figure 5).
2. Securely attach the hanger bracket to the outlet box using the outlet box screws and washers supplied with your fan or outlet box (Figure 5).

NOTE: Outlet box screws pass through slotted holes of the hanger bracket (Figure 5).

3. Pull the electric wires in the outlet box down through the opening in the hanger bracket and bend wires up and out of the way so that the hanger ball will easily fit into the hanger bracket.
4. Carefully lift the fan and seat the downrod/hanger ball assembly on the hanger bracket that was just attached to the outlet box (Figure 6). Be sure the groove in the ball is lined up with tab on the hanger bracket (Figure 5).

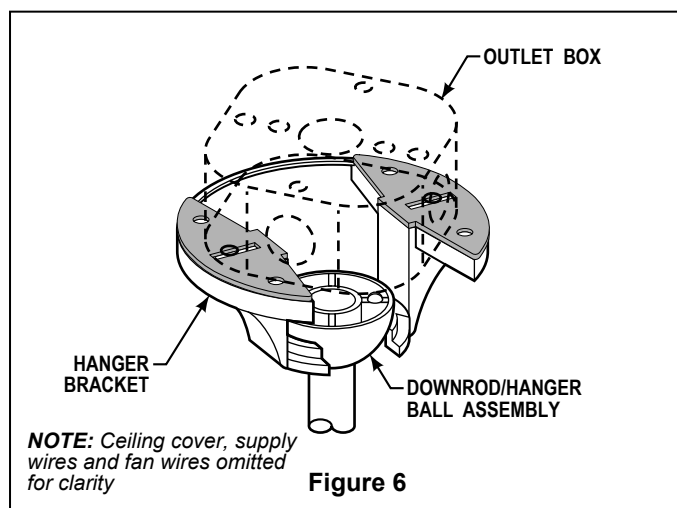

⚠ WARNING

Failure to seat tab in groove could cause damage to electrical wires and possible shock or fire hazard.

⚠ WARNING

To avoid possible shock, do not pinch wires between the downrod/hanger ball assembly and the hanger bracket.

INSTALLATION NOTE

If C4 Remote Control (optional) is desired, a Remote Receiver Unit must be installed (after setting the code) in the Hanger Bracket prior to wiring your ceiling fan. See page 8

Electrical Requirements

Your new ceiling fan will require a grounded electrical supply line of 120 volts AC, 60 Hz, 15 amp circuit. The outlet box must be securely anchored and capable of withstanding a load of at least 50 lbs.

WARNING

To reduce the risk of fire, electrical shock, or personal injury, mount fan to outlet box marked acceptable for fan support, and use screws supplied with outlet box. Most outlet boxes commonly used for support of light fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

If your fan is to replace an existing light fixture, turn electricity off at the main fuse box at this time and remove the existing light fixture.

WARNING

Turning off wall switch is not sufficient. To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring. All wiring must be in accordance with National and Local codes and the ceiling fan must be properly grounded as a precaution against possible electrical shock.

WARNING

To avoid fire or shock, follow all wiring instructions carefully. Any electrical work not described in these instructions should be done or approved by a licensed electrician.

DAMP LOCATION CEILING FAN: *If you have purchased a Damp Location Ceiling Fan, you may only use light kits marked suitable for use in damp locations.*

Wiring and Control Options

Please choose one of the following options and proceed to the page as indicated.

1. Standard 4-position, 3-speed, pull chain switch and reverse slide switch, see page 7.
2. Optional fan only wall slide control (C1), see page 9.

3. Optional fan & light remote control (C4), see page 8.

4. Optional fan & light slide wall control (C2) or optional 2-fan slide wall control (C5). Please see instructions provided with control.

NOTE: *If you are using a Fanimation Light Fixture with your fan, see Ceiling Fan Light Kit Installation Instructions (packed with light kit) for wiring.*



How to Wire Your Fan - Pull Chain

If you feel that you do not have enough electrical wiring knowledge or experience, have your fan installed by a licensed electrician.

⚠ WARNING

To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring. **Note:** If you are not sure if the outlet box is grounded, contact a licensed electrician for advice, as it must be grounded for safe operation.

1. Connect the green grounding lead from the hanger ball and the green grounding lead from the hanger bracket to the supply grounding conductor (this may be a bare wire or wire with green colored insulation). Securely connect wires with wire connectors supplied.

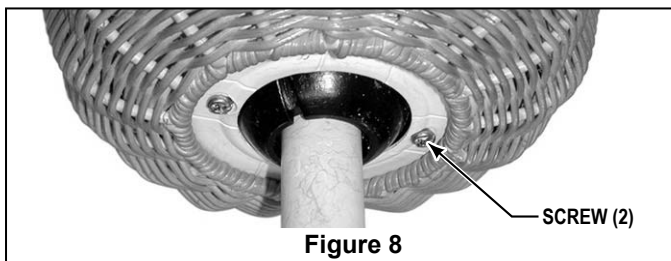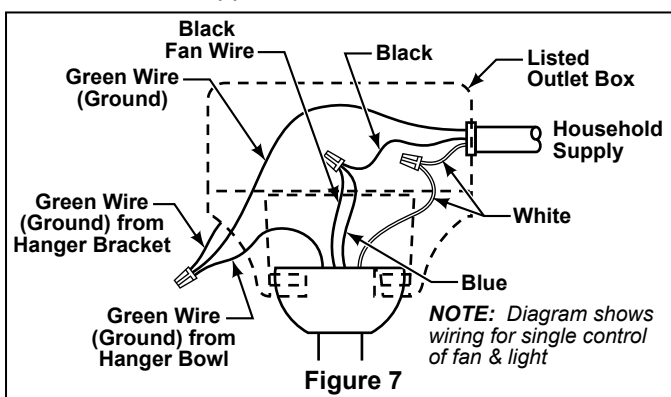

2. Securely connect the white fan motor wire to the white supply (neutral) wire using wire connector supplied. Securely connect the black fan motor wire and blue wire to the black supply wire using wire connector supplied (Figure 7). After connections have been made, turn leads upward and carefully push leads into the outlet box, with the white and green leads on one side of the outlet box and the black and blue leads on the other side of the outlet box.

INSTALLATION NOTE

If separate control of light fixture (optional) is desired, a separate switch leg from the outlet box is required. In this instance the blue wire from the fan will be connected to the light switch leg (typically red wire)

⚠ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until blades are in place. Noise and fan damage could result.


3. Secure the ceiling canopy to the hanger bracket with screws provided (screws shipped already threaded into hanger bracket) (Figure 8). Your fan is now wired to be turned on and off from the fan pull chain speed control.

Operating Instructions - Pull Chain

⚠ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades are in place. Noise and fan damage could result.

1. Restore electrical power to the outlet box by turning the electricity on at the main fuse box.
2. Check the operation of the fan by gently pulling on the pull chain switch. (Figure 9)
3. If airflow is desired in the opposite direction, turn the fan off and wait for the blades to stop turning. Then slide the reverse switch to the opposite position and turn fan on again. Your fan model is equipped with a 4-position, 3-speed, pull chain switch. The operating sequence is as follows:

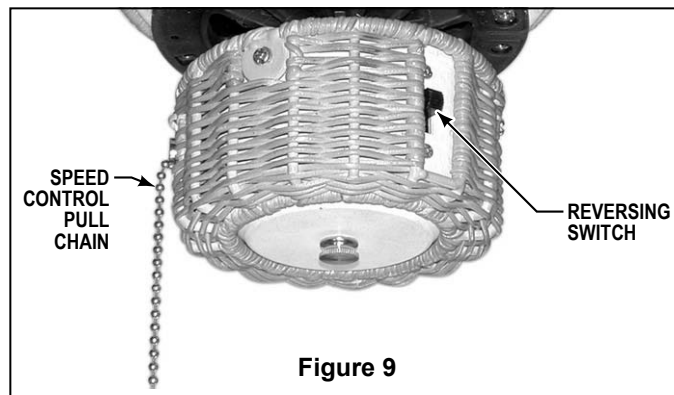

1st Pull = HIGH 3rd Pull = LOW
2nd Pull = MEDIUM 4th Pull = OFF

How to Wire Your Fan - C4 Hand-held Remote (Optional)


If you feel that you do not have enough electrical wiring knowledge or experience, have your fan installed by a licensed electrician.

WARNING



To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring. **Note:** If you are not sure if the outlet box is grounded, contact a licensed electrician for advice, as it must be grounded for safe operation.

1. Setting the Code: The remote unit has 16 different code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security systems, simply change the combination code in your transmitter and receiver. To set the code, perform these steps.

- **Transmitter:** remove battery cover. Press firmly below arrow and slide battery cover off. Slide code switches to your choice of up or down position. Factory setting is all up. Do not use this position. With a small screwdriver or ball point pen slide firmly up or down (Figure 10a). Replace battery cover on the transmitter.
- **Receiver:** Slide code switches to the same positions as set on your transmitter (Figure 10b).

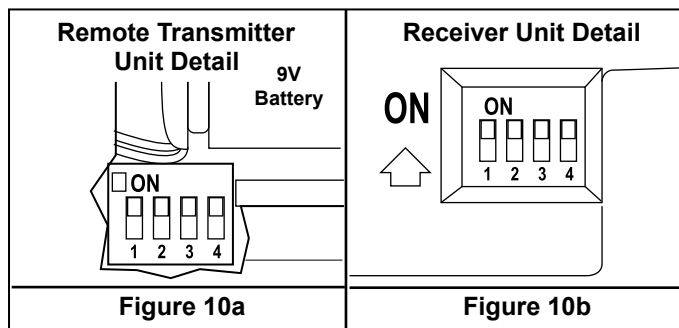

NOTE: If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.

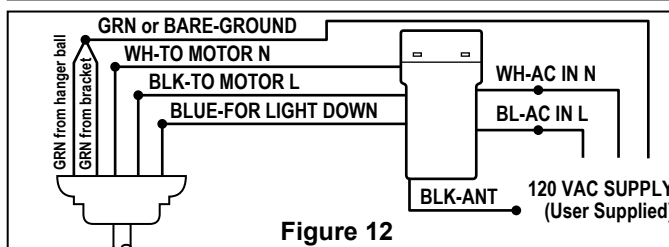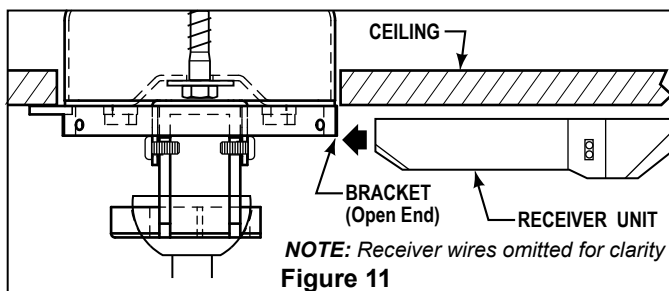

2. Installing Receiver in Hanger Bracket:

- Slide remote Receiver into the Hanger Bracket (Figure 11).
- Connect wires as indicated: (Figure 12)
 - Green Hanger Bracket and Hanger Ball wires to BARE (ground) wire.
 - BLACK Receiver Unit wire (AC IN L) to BLACK supply wire.
 - WHITE Receiver Unit wire (AC IN N) to WHITE supply wire.
 - WHITE Receiver Unit wire (TO MOTOR N) to WHITE fan wire.
 - BLACK Receiver Unit wire (TO MOTOR L) to BLACK fan wire.
 - BLUE Receiver Unit wire (FOR LIGHT DOWN) to BLUE light wire.
- Position all connected wires and receiver antenna to allow installation of ceiling canopy.
- Using canopy screws threaded into the hanger bracket reinstall ceiling canopy.
- Restore electrical power.

Operating Instructions - C4 Hand-held Remote (Optional)

WARNING


Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until the blades is in place. Noise and fan damage could result.

NOTE: Set pull chain to high speed before using the remote control. To avoid accidental pull chain use, shorten chain by cutting it 2 to 4 inches below switch body. You can now use your speed control to select any of the 3-speeds plus OFF.

1. Operating & Using Remote Transmitter (Figure 13): Install 9 volt battery (If not using for long periods of time, remove battery to prevent damage to transmitter). Store the transmitter away from excess

heat or humidity.

- HI Push Button – high fan speed
- MED Push Button – medium fan speed
- LOW Push Button – low fan speed
- OFF Push Button – fan off
- Light Push Button – no function (unless light kit is installed)

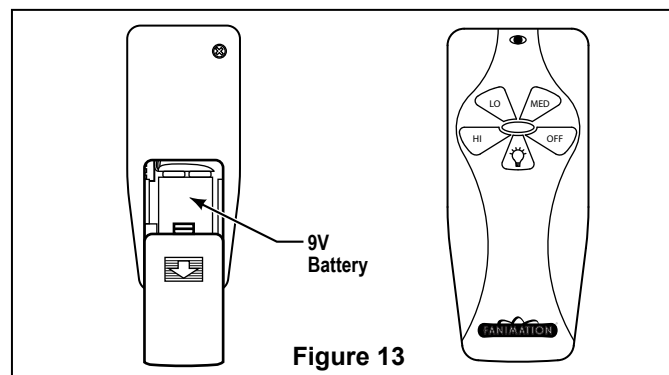

How to Wire Your Ceiling Fan - C1 Wall Control (Optional)

NOTE: If fan or supply wires are different colors than indicated, have this unit installed by a qualified electrician.



- Complete steps 1 thru 3 "How to Wire Your Fan - Pull Chain" from page 7.
- Installing Wall Control (Figures 14 & 15):
 - With electrical power still disconnected, remove the existing wall plate and switch.
 - Make wiring connections with wire nuts as shown in Figure 11.
 - One black wire from wall control unit to black (hot supply).
 - One black wire from wall control unit to black wire leading to ceiling outlet box.
 - Attach wall control unit to outlet box using the two 6-32 screws provided.
 - Attach wall plate to the switch control front using the two small screws provided.
 - Restore electrical power.

WARNING

To avoid possible fire or shock, make sure that the electrical wires are completely inside the outlet box and not pinched between the wall plate and the wall.

WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire. Do not operate fan until blade is in place. Noise and fan damage could result.

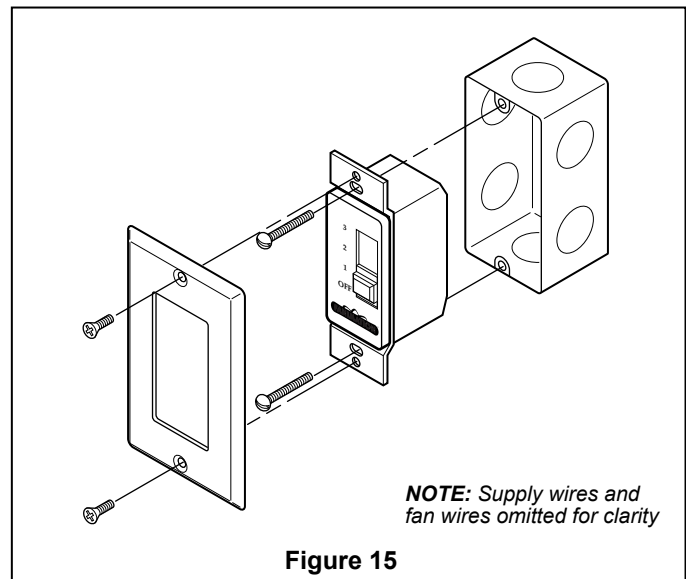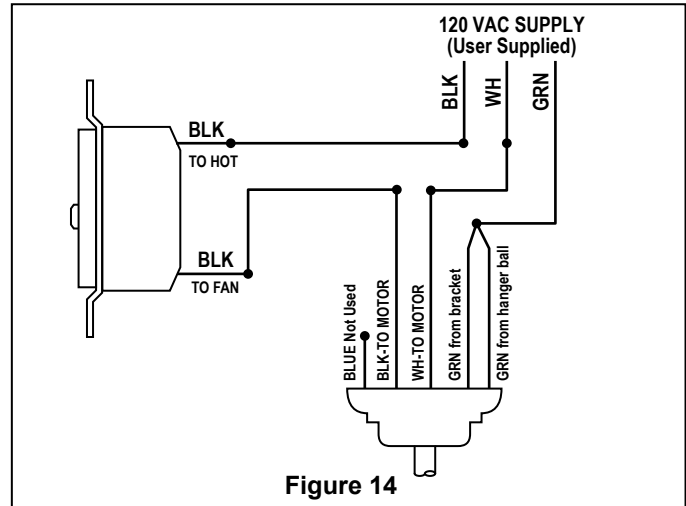


Operating Instructions - C1 Wall Control (Optional)


- Operating & Using Wall Control (Figure 16):

NOTE: Set pull chain to high speed before using the wall control. To avoid accidental pull chain use, shorten chain by cutting it 2 to 4 inches below switch body. You can now use your speed control to select any of the 3-speeds plus OFF.

- 3 Slide Switch – high fan speed
- 2 Slide Switch – medium fan speed
- 1 Slide Switch – low fan speed
- OFF Switch – fan off

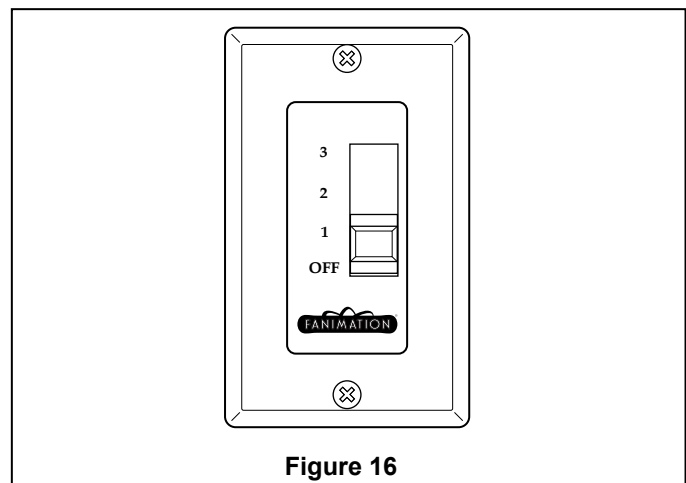

Mounting the Fan Blades

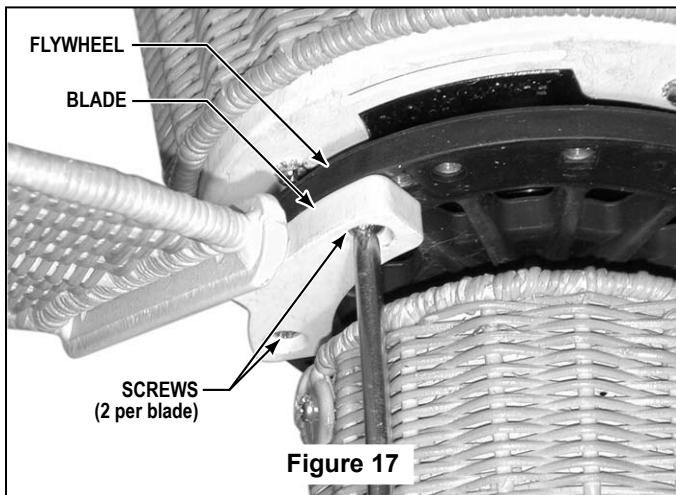

INSTALLATION NOTE

Attach the fan blades after hanging the fan body and wiring the fan to prevent blade breakage or damage.

1. Attach Blades to the Rubber Flywheel using the 10-32 x 1/2" Flywheel Screws (Figure 17).
2. Make sure the screws securing the Blades to the Flywheel are tight and that the Blades are properly seated on the Flywheel.

INSTALLATION NOTE

Attach the Blades to the Rubber Flywheel using the holes marked #5 for 5-blade application. For 4-blade application, use the holes marked #4.

Maintenance

Periodic cleaning of your new ceiling fan is the only maintenance that is needed.

When cleaning, use only a soft brush or lint free cloth to avoid scratching the finish.

Abrasive cleaning agents are not required and should be avoided to prevent damage to finish.

WARNING

Do not use water when cleaning your ceiling fan. It could damage the motors or the blades and create the possibility of electrical shock.

Blade Cleaning

Periodic light dusting of the Wicker blades is recommended. A feather duster will work best. Avoid

using water, cleansers, or harsh rags, which can warp and ruin the blades.

⚠ WARNING

For your own safety turn off power at fuse box or circuit breaker before trouble shooting your fan.

Trouble Shooting

TROUBLE	PROBABLE CAUSE	SUGGESTED REMEDY
1. FAN WILL NOT START	<ol style="list-style-type: none"> 1. Fuse or circuit breaker blown. 2. Loose power line connections to the fan, or loose switch wire connections in the switch housing. 3. Reversing switch in neutral position. 4. Dead battery in remote control. 	<ol style="list-style-type: none"> 1. Check main and branch circuit fuses or circuit breakers. 2. Check line wire connections to fan and switch wire connections in the switch housings. <p>CAUTION: Make sure main power is turned off !</p> <ol style="list-style-type: none"> 3. Make sure reversing switch position is all the way to one side. 4. Replace with fresh battery.
2. FAN SOUNDS NOISY	<ol style="list-style-type: none"> 1. Blades not attached to fan. 2. Loose screws in motor housing. 3. Screws securing fan blade holders to motor flywheel are loose. 4. Wire connectors inside housing rattling. 5. Motor noise caused by solid state variable speed control. 6. Screws holding blades to blade holders are loose. 7. Rubber flywheel set screw loose. 	<ol style="list-style-type: none"> 1. Attach blades to fan before operating. 2. Check to make sure all screws in motor housing are snug (not over-tight). 3. Check to make sure the screws which attach the fan blade holders to the motor flywheel are tight. 4. Check to make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. <p>CAUTION: Make sure main power is turned off !</p> <ol style="list-style-type: none"> 5. Some fan motors are sensitive to signals from solid-state variable speed controls. Solid-state controls are not recommended, choose an alternative control method. 6. Tighten screws securely. 7. Tighten set screw securely.
3. FAN WOBBLER EXCESSIVELY	<ol style="list-style-type: none"> 1. Setscrew in downrod support is loose. 2. Setscrew in downrod/hanger ball assembly is loose. 3. Screws securing fan blade holders to flywheel are loose. 4. Blade holders not seated properly. 5. Hanger bracket and/or ceiling outlet box is not securely fastened. 6. Fan blades out of balance. 	<ol style="list-style-type: none"> 1. Tighten both setscrews securely in downrod support. 2. Tighten the setscrew in the downrod/hanger ball assembly. 3. Check to be sure screws which attach the fan blade holders to the flywheel are tight. 4. Check to be sure the fan blade holders seat firmly and uniformly to the surface of the flywheel. If holders are seated incorrectly, loosen the screws and retighten. 5. Tighten the hanger bracket screws to the outlet box, and secure outlet box. 6. Interchanging position of fan blades can redistribute the weight and result in a smoother operation. For example, exchange blades in positions 1 and 3 or 1 and 4. If this does not improve wobble, exchange 2 and 4 or 2 and 5.
4. NOT ENOUGH AIR MOVEMENT		<ol style="list-style-type: none"> 1. If possible, consider using a longer downrod. For example, use a 12" downrod instead of the 6" downrod that comes with your fan. 2. Change your blade configuration from 5 blades to 4 blades. The flywheel will accommodate both a 5-blade and 4-blade configuration.

Parts List

Model #FP1600/1610/1620

Ref No.	Description	Part #	
		FP1600 or FP1610	FP1620
1	Hanger Bracket	P1608NA/MC P1608WH/WH	P1608NA/RS
3	Ceiling Canopy (with Canopy Wicker Cover)		
4	Ceiling Canopy Screws (2)		
	Hardware Bag Containing:	HDWFP1600	HDWFP1600
1A	Rubber Pads		
5	Flat Washer (2)		
6	Lock Washer (2)		
7	8-32 x 1-1/2" Machine Screws (2)		
16	10-32 x 1/2" Flywheel Screws (10)		
17	Wire Connectors (3)		
2	Downrod/Hanger Ball Assembly containing:	DR6MC(FP1600) DR6WH(FP1610)	DR6RS
8	Clevis Pin		
9	Bridge Pin		
11	Fan Motor (with Wicker Cover) Assembly consisting of:	FP1600, Fan Body - Natural Wicker with Marbled Cream trim	FP1620, Fan Body - Natural Wicker with Rust trim
10	Downrod Support		
12	Flywheel	FP1610, Fan Body - White Wicker with White trim	
13	Switch Housing (with Wicker Cover)		
14	Reverse Switch		
15	Speed Control Pull Chain		
18	Blades		
	Narrow Oval - Natural (5)	TRW4NA/MC	TRW4NA/RS
	Narrow Oval - White (5)	TRW4WH/WH	N/A
	Standard Oar - Natural (5)	TRW7NA/MC	N/A
	Standard Oar - White (5)	TRW7WH/WH	N/A
19	Motor Coupling Cover	MCCMC	MCCRS
20	Ceiling Canopy Wicker Cover (NA or WH)	P1602NA/MC or WH/WH	P1602NA/RS
21	Motor Housing Wicker Cover (NA or WH)	P1604NA/MC or WH/WH	P1604NA/RS
22	Switch Housing Wicker Cover (NA or WH)	P1606NA/MC or WH/WH	P1606NA/RS

Before discarding packaging materials, be certain all parts have been removed

How to Order Parts

When ordering repair parts, always give the following information:

- Part Number
- Part Description
- Ceiling Fan Model Number

Contact your retail store for repair parts.

The Tropicana® FP1600/1610/1620

Exploded-View

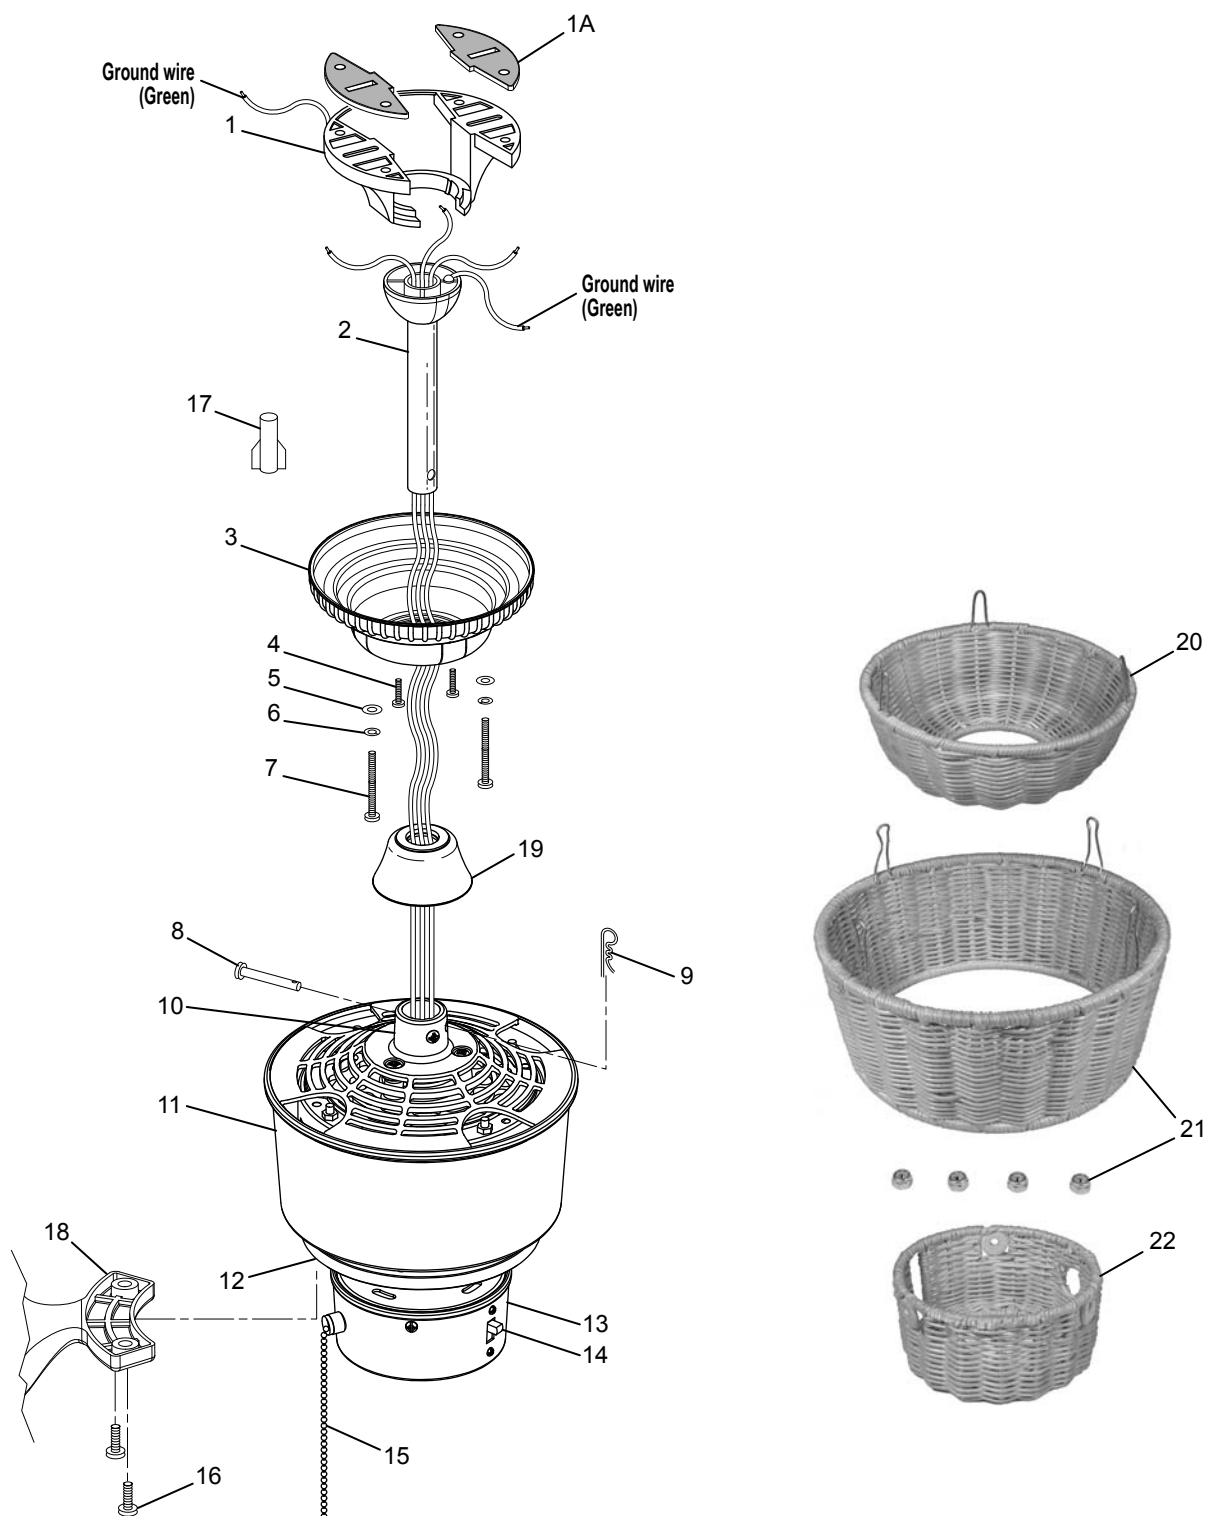


Figure 18

NOTE: The illustration shown is not to scale or its actual configuration may vary, the wicker is removed for parts clarity



**10983 Bennett Parkway
Zionsville, IN 46077
(888) 567-2055
FAX (866) 482-5215**

Visit Our Website @ fanimation.com